




**HYDRO-BLOK SINGLE SLOPE SHOWER - LINE DRAIN TILE TRIM KITS**

In-Sight Trim gives the option of having a metal finished edge along the length of the line drain gap



In-Sight Trim Kit Includes:

- ◆ 2 pcs In-Sight trim 35 3/4" length
- ◆ Metal cut-off wheel
- ◆ Temporary gap spacer/alignment sticks

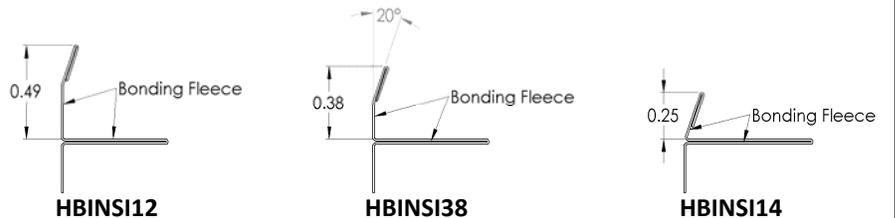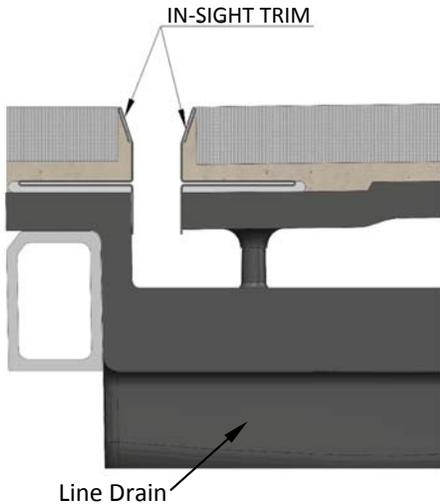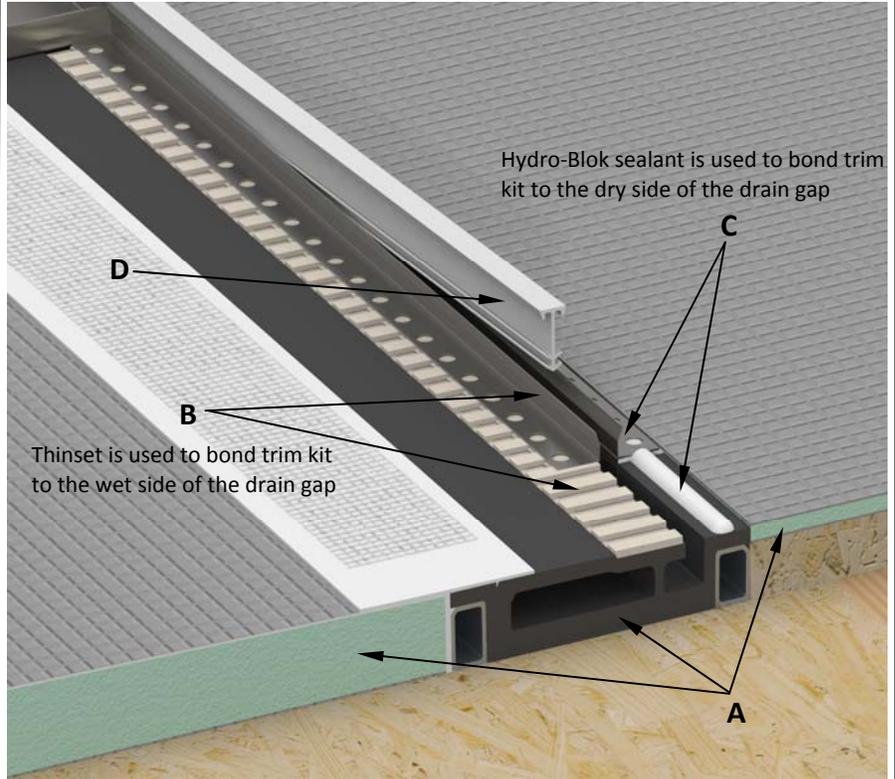

Trim pieces are made from high quality 304 Stainless Steel .25mm thick

- A. Install Hydro-Blok line drain, shower pan and wallboard per typical specs. Use included cut-off wheel to cut trim to length as needed.
- B. On shower/wet side of drain gap use thinset along entire length of drain to bond trim piece to drain body. Firmly press trim into thinset and position in place. Remove any excess thinset from drain slot if necessary.
- C. On dry side of drain gap run a continuous bead of Hydro-Blok sealant along the entire length of drain to bond trim piece to drain body. Firmly press trim piece into sealant bead and adjust into position. Trim pieces should run the entire length of line drain.
- D. **Before thinset & sealant sets up**, insert supplied plastic spacer sticks into gap between the trim pieces. This will properly space the trim pieces and hold them in position while thinset and sealant cures. Leave this temporary spacer in place while tiling to keep debris out of drain slot. **Remove plastic gap spacer sticks before putting shower into use.**

**\*\* PLEASE NOTE: When cutting trim to desired length it is best practice to place all cut edges at the outer ends of line drain. This will allow factory edges to be butted together when using multiple trim pieces.**

**Line Drain Trim Kit**

**Part Number:**

HBINSI12 (1/2")

HBINSI38 (3/8")

HBINSI14 (1/4")